


1995-1997 Ford SVO Plumbing

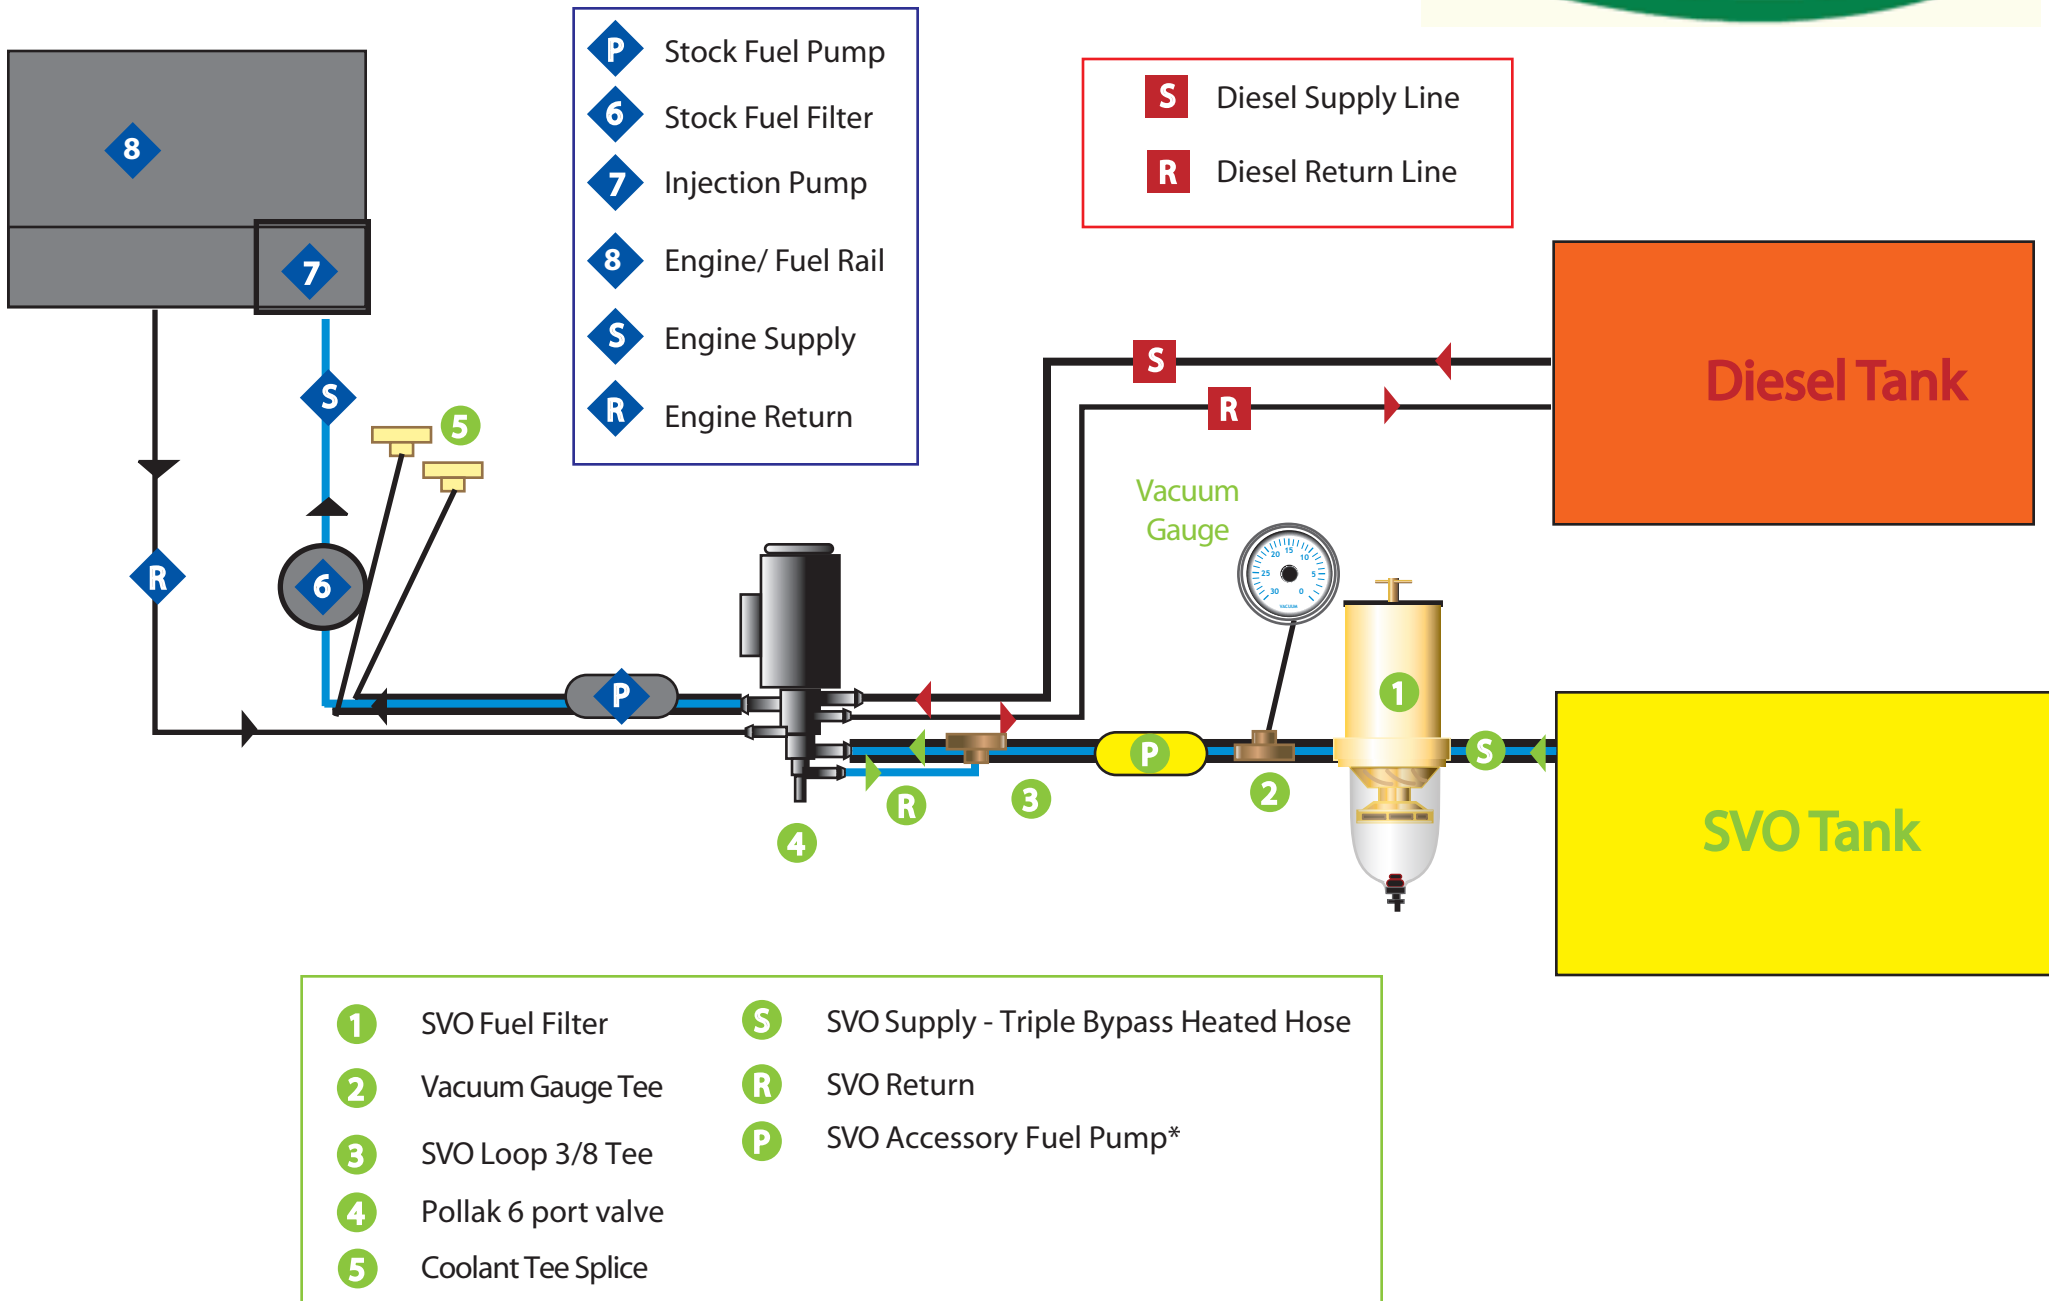

*The SVO Fuel Pump must be wired to the switch so it is activated while running SVO and deactivated when running diesel.