



- ON \Rightarrow SVO
- OFF \Rightarrow DIESEL
- MOM \Rightarrow QUICK
- ON \Rightarrow PURGE

MOM= Momentary

DESCRIPTION

ON \Rightarrow SVO The engine is drawing fuel from the SVO tank and the return is in a loop.

OFF \Rightarrow DIESEL The engine is drawing fuel from the diesel tank and the return is in a loop. Start and stop on diesel to allow

MOM \Rightarrow QUICK The engine is drawing fuel from the diesel tank and returning to the SVO tank. This allows it to flush the injectors/pump and rails/lines with diesel essentially performing a "quick purge" function. This "quick purge" can be achieved by holding the switch on the momentary position for 1 minute while driving or at idle. If there is a stock fuel filter plumbed in-line on SVO, please hold it down for 2 minutes. This function is also useful to purge air out of either diesel or svo system.

ON \Rightarrow PURGE