



MOM= Momentary

- ON → SVO
- OFF → DIESEL
- MOM ON → QUICK PURGE

DESCRIPTION

The engine is drawing fuel from the SVO tank and the return is in a loop.

The engine is drawing fuel from the diesel tank and the return is in a loop. Start and stop on diesel to allow

This Return Valve allows one to control the Loop or Return to SVO Tank Function. GFS recommends always starting and shutting the vehicle down on diesel. This allows for clean starts. The "purging" can be accomplished in one of two ways:

- 1.) 5 Miles before shutting the vehicles off, switch the Pollak back to diesel and drive to final destination.
- 2.) 2 miles before shutting the vehicle off, switch the Pollak back to diesel and hold down the momentary toggle switch until you turn the vehicle off. The Momentary toggle switch can be held down while at an idle, as well. If there is a stock fuel filter plumbed in-line on SVO, please hold the momentary toggle switch down for 3 miles. This function is also useful to purge air out of either diesel or svo system.