



ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 ge = yellow
 or = orange

- G - Fuel Level Sensor
- G6 - Fuel Pump (FP)
- J17 - Fuel Pump (FP) Relay
- S228 - Fues 28 (in fuse panel)
- S232 - Fuse 32 (in fuse panel)
- S234 - Fues 34 (in fuse panel)
- S243 - Fues 43 (in fuse panel)
- T6 - 6-pin connector, brown, (in protective housing for connectors, in plenum chamber, left)
- T14a - 14-pin Connector, near battery

- (269) - Ground Connection (sensor ground) - 1-, in instrument panel wiring harness
- (A71) - Connection (86), in instrument panel wiring harness
- (A100) - Connection -2- (87), in instrument panel wiring harness
- (A155) - Connection -2- (86), in instrument panel wiring harness
- (B168) - Connection (86), in passenger compartment wiring harness

97-36973